





BigButtonPhone

Operator's Manual

Table of Contents

Overview of the phone	3
Key Pad Functions	4
Safety Information	6
Quick Setup Guide	8
How to add contacts to the Phonebook	13
How to setup SOS feature	14
How to setup speed dials	15
How to make, answer and reject phone calls	16
How to text message and view messages	17
How to change profiles, ringtones and message tones.....	18
Additional Features and settings	19
Troubleshooting and Support	23

Overview of the phone

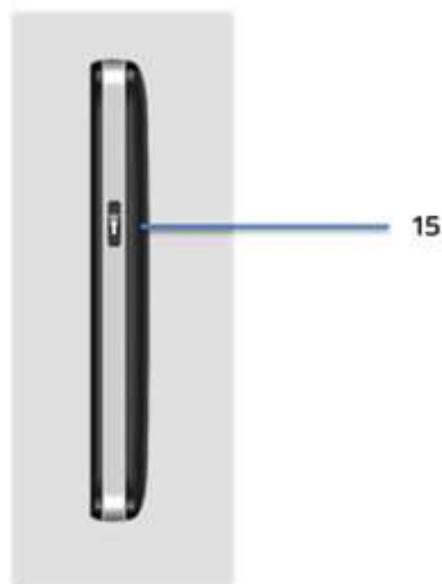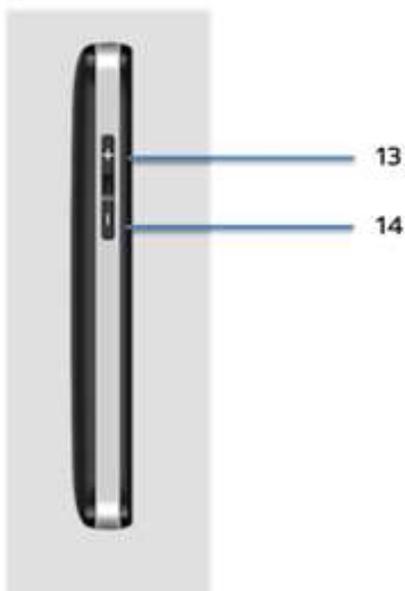

1. Ear Speaker
2. Up button
3. Left button (screen selection button)
4. Right button (screen selection button)
5. Call button
6. End Call / Power button
7. Down button
8. Star button
9. Hash/Pound key
10. Camera lens
11. Loud Speaker
12. SOS button
13. Volume up
14. Volume down
15. Torch button
16. Charging station

Key Pad Functions

<p>Answer Key (Green key)</p> 	<p>Press to answer a call: press to answer an incoming call Standby mode : press to enter call list</p>
<p>End Key (Red key)</p> 	<p>Phone Off : Long press to switch off; Phone On : Long press to switch on; Short press: takes you back to home screen</p>
<p>Navigation Key (Up key)</p> 	<p>Home screen : press to enter Message Menu Operating : press to move cursor up</p>
<p>Navigation Key (Down key)</p> 	<p>Home screen : press to enter Alarm Menu Operating : press to move cursor down</p>
<p># KEY</p> 	<p>Home screen: Long press: to lock keypad Short press: to enter # Editing mode: press to switch input method</p>
<p>*KEY</p> 	<p>Home screen: Long press: to switch on/off silent mode Short press: to enter * Editing mode: press to add symbols in messages</p>
<p>Torch key</p> 	<p>Home screen: Long press to turn on/off torch.</p>
<p>Volume keys</p> 	<p>Home screen: Press +: to increase key tone volume Press -: to decrease key tone volume</p> <p>Talking mode: adjust the volume of call</p>

Numbers key pad



Home Screen: Press number keys to dial numbers.
If you have set up Speed Dial, numbers 2 – 9 will be your speed dial numbers to contacts, you have selected

Text Message Screen: Each number will have letters in them. To make a text message click the number button which has the letter you want to select, clicking the number quickly will change through each letter on that key pad

Safety Information

Read this entire pamphlet carefully before you start using the device. This will take you a couple of minutes, but it will save you time later and will allow you to enjoy all the features on your device.

How to handle and preserve your device?

- Trying to modify, disassemble or repair the device or the charger yourself will make the warranty invalid. Only qualified Opel Mobile personnel may install or repair phone equipment.
- Avoid hitting or shaking your phone.
- The warranty of this phone may be annulled if you use unauthorised accessories. To prevent this from happening and to keep your phone working properly use only the battery charger and Micro USB cable that originally comes with the device.
- Make sure the device does not get wet. To avoid possible, short-circuit, electric shock or corrosion keep your phone away from rain, water splash, sweat or moisture. You must not use your device with your hands wet or immerse it in water. In case it gets wet keep the phone OFF and do not try to use a microwave to dry it.
- Do not use your phone when entering areas that are near flammable liquids
- Observe all local laws and regulations on the use of mobile phones. Turn off the device before entering petrol stations, oil refinery's or chemical plants.
- This product should not be used in extremely hot, cold, dusty or humid spaces. It also should not be exposed to long periods of sunshine or strong magnetic fields.
- If you have a pacemaker keep the phone at least a 20cm distance from the place it is located. This phone may cause interference to some hearing aids and other electronic devices.
- Avoid all heat sources, ovens or other appliances (including amplifiers) that produce heat or are hot surfaces.
- Switch off the phone when entering an aircraft
- Do not use a hand-held phone when operating any motor vehicles, heavy equipment or moving objects
- Excessive high-volume levels or noise may affect your hearing. To prevent this to happen use an adequate volume in your earphones when you are listening to music or employing any of the multimedia features on the phone.
- You are fully responsible for keeping your information backed up and we don't take any legal responsibility for data that is damaged or lost. It is possible to erase or interfere with

the information stored in your phone by a magnetic device when using your phone. To avoid this issue, keep your phone clear from magnetic devices.

- Pointing the torch into your own or another person's eyes will cause damage and may result in blindness.

Safety recommendations for accessories


- Use only Opel Mobile accessories or chargers that came with this phone
- Be careful when handling the battery. The lithium-ion battery can be put into use immediately after being unpacked. Use only the Opel Mobile battery that came with the device. We recommend charging the battery as soon as possible once the phone has been switched on.
- Immediately stop using the battery charger if you smell an odour or overheats or a crack appears in the casing.
- In case you notice the cable or the plug have suffered any damage, discontinue using it and contact sales support line as soon as possible for advice.
- The memory card should be protected from strong shocks and static electricity. Handle with care.

Usage conditions and restrictions

- All packaging materials, especially plastic ones, must be disposed properly. The lack of this procedure may cause a suffocation danger to children. Any packaging must be kept out of children's reach.
- This device is not a toy and not designed for children and strict adult supervision must be adhered to at all times. Keep all the phone and accessories beyond children's reach
- This device can be recycled. To dispose of this device properly remember to follow local regulations. Local authorities may guide you on finding appropriate facilities to this end. The battery must never be disposed in a fire.
- If this phone is lost or has been stolen, please notify your network service provider as soon as possible and the SIM card will be deactivated
- You are fully responsible for any damage caused by not following these instructions or for improper use of the device. We do not accept any liability for any improper use or mishandling on this device.

Quick Setup Guide

1. Install the Sim Card and a Micro SD card (a Micro SD is optional and is sold separately). To install these, you have to open the back of the phone. The opening slot is at the bottom left corner, open it and then slide your finger around to remove the back cover.

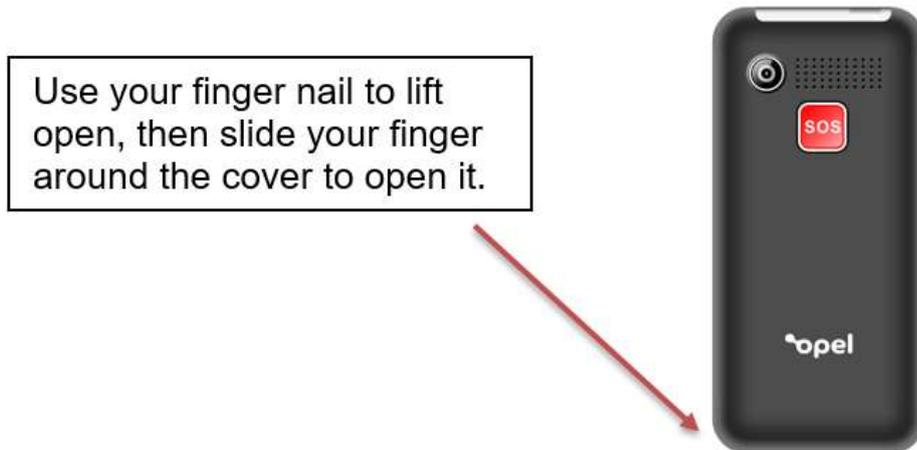

2. Remove the battery. After this is done, you will see the two slots. The left-hand slot is for the optional Micro SD card should you have one. The other slot on the right-hand side, which says "SIM1" is where you need to insert the SIM card. To install the SIM Card insert it into the SIM card slot. You must do it carefully and lightly until you notice the bottom of the SIM card has aligned with the bottom of the slot. The gold plate of the SIM card should face down when sliding the SIM into place. The corner of the SIM, which is not square, should be on the bottom right when sliding the SIM into place.



Please note: Ensure you are using a standard size SIM card, it is the largest of the 3 SIM cards available. If you don't have a standard size SIM card contact your telco provider as they will be able to supply one for you.

How to install Micro SD card if you choose to use one

3. To place the micro SD card into the slot, move the card locker to the left opening the locker. Place the micro SD card's gold pins facing downwards, this way the card will be into position. Rest it on the phone and finally push the locker to the left to lock.



Micro SD
card slot

4. After you have safely placed the SIM card and memory card, (if applicable) in the phone, insert the supplied battery aligning the pins with the contacts. Place the back cover on correctly.



Battery Pins
insert here first
then push down
to lock in.



5. Turn on the phone pressing and holding the End call/Power button. As soon as it is on, it may ask you for an unlock code (the default passcode is 1122). You can change it later in the phone settings. To turn the phone off, press the same End/Power button. When the phone is on after the battery installation or removal you must set date and time for this: Go to Menu > Settings > Phone settings > Time and Date to set the time and date.
6. Warning : The SIM card will be locked if you type wrong code for three times. And it will inform you to type in PUK code. (Please contact your network service vendor to unlock it if needed)
7. We suggest at this stage charging your phone for at least 6 hours.

Battery

We recommend you fully charge the battery as follows to carry out all the phone tasks:

- Place the phone onto the charging station, and then plug the charging station into a power outlet.
- The phone has a battery status icon. It is situated in the top right corner of the display; this will show you when the phone is fully charged. Once fully charged stop charger by disconnecting the USB cable or take the phone out of the charging station
- Any time your phone indicates the battery is low; you must complete the steps shown above.
- Another option is to connect the mobile phone to a PC and charge it through the USB cable provided.




Charging Station,
Insert phone facing
down in the slot to
charge. Please note
that when the
phone is resting in
the station it will
rest at a slight angle

Please Note: When the Battery has completely run out of charge, you will need to charge the phone for 10 minutes before being able to switch the phone back on.


How to unlock the phone while in standby

1. Press the top left key once then within 2 seconds click the Hash key once to unlock the mobile phone.

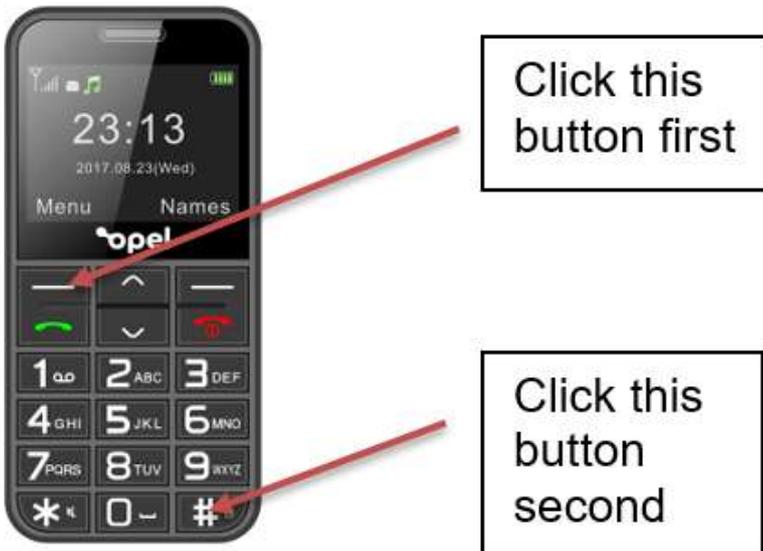

Turning the Phone on for the first time

After charging, turn the phone on by holding down the Red End call button on the inside of the phone.

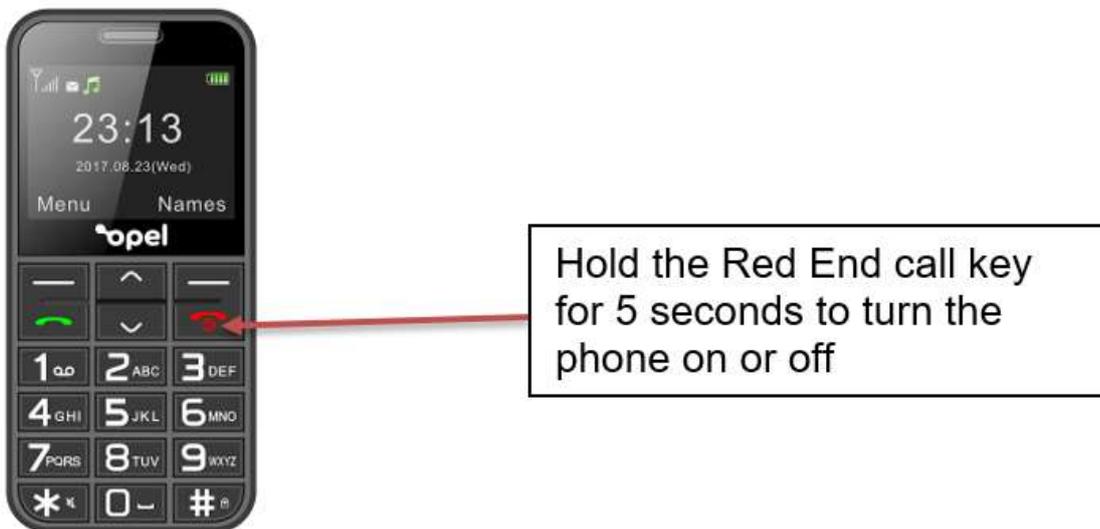

1. It will ask you to select your preferred language. Scroll up or down to select your language then click ok.
2. It will then ask you to input the time. Select the Hours and Minutes using the number keys.
Note: it is in 24hr time

3. Click the down key to then enter the date. Day, Month and Year using the number keys
4. Scroll down to then select if you wish to use Daylight savings. Press the left and right key to turn daylight savings on or off.
5. Select the "OK" key to save

Your new Opel Mobile Phone is now ready for use.

For additional information about further settings on this phone keep reading

Storage data and contact information

The device can store information in its memory and on the SD Card (optional).

When it comes to phonebooks and contact information, these can be saved in the phone's memory that can keep up to 500 contacts; or it can be saved in the SIM card, but the amount of contacts storage depends on the SIM card itself. You can program the phone to save in your preferred place.

- **The home screen** will display several icons shortly after the phone is on. These icons indicate: signal strength, SIM card in use, sound mode, keypad lock, battery status, date, time etc.
- To unlock the display screen so that you can use the phone press the top left [-] button and then followed by the hash [#] button.

How to add contacts to the Phonebook

Add contacts to normal phonebook



1. Click the top left button  to open the Menu.
2. Scroll down using the down key until you reach phonebook
3. Press the ok key to open this menu
4. Click ok again on normal phonebook
5. Click options button to add new contact
6. Click select button
7. Add the details using the keypad to add contacts, number, email and other information. Using the down key to select each option
8. Click options when complete, then click the save button

Add contacts to picture phonebook



1. Click the top left button  to open the Menu.
2. Scroll down using the down key until you reach phonebook
3. Press the ok key to open this menu
4. Scroll down to picture phonebook then click ok
5. Click add then click ok on picture
6. Take a photo of the person you are adding into contacts using the 5 key to take the photo. Then click save.
7. Click down to select name then click ok
8. Now add their name and click down to add their phone number. Then click save
9. Then click the back button and continue to add more contacts

How to setup SOS feature

This mode is a program that will send a default message and call up to 5 programmed numbers until one of them answers the call. This can be used in case of emergency. If the SOS mode is enabled (as shown below) it can be activated by pressing the red [SOS] button the back of the phone.



SOS Button: hold for 3 Seconds to activate. The Phone will start calling and texting your 5 contacts and will sound an alarm on the phone. To end simply hold the SOS button down for another 3 seconds.

1. Click the menu button to open the menu
2. Scroll down until you see SOS menu then click ok
3. Select SOS mode settings to turn SOS on or off.
4. Scroll down to select SOS sms. You can keep this as default message or create your own personal message.
5. Then scroll down to Set SOS number. You can store 5 numbers. Select each one to input phone number manually or from your phonebook.
6. Then scroll down to Set outgoing voice message. You can record your own message or leave it as default voice message

Please note: you can have one of the selection as “000” to dial straight to emergency services

Your SOS feature is now set up and enabled.

How to setup speed dials

1. Click on the names menu on the home screen using the top right corner key.
2. Then click on "OK" on normal phonebook.
3. Click on options
4. Scroll down to Phonebook settings and click select
5. Then scroll down to select Speed dial and click ok
6. Click on status using the ok key and select either on or off.
7. Scroll down to Set numbers and click ok.
8. You can save Speed dial numbers to 2-9 on the key pad.
9. Select each number you want to add a speed dial to by scrolling up and down.
10. Click edit on the number you want to have speed dial set up.
11. Choose which number from your phonebook you want as speed dial for that number.
12. Follow the same process for other numbers.

To then make a phone call on that speed dial, hold down the number on the key pad for 3 seconds to dial that number.

How to make, answer and reject phone calls

Accepting incoming calls: To Accept an incoming call you can simply click the Green answer button on the front of the phone.

Reject incoming calls: To Reject an incoming call you can simply click the Red end button on the front of the phone.

Making a phone call:

Option 1:

1. Dial the phone number on the key pad then click the Green Call button to dial that phone number

Option 2:

1. Open your phonebook as per steps above.
2. Scroll up or down using the up or down arrow keys until you have highlighted the person you wish to call.
3. Click the green button to call that person

Ending a call: To end a call simply click the red end call button once.

Call History: By clicking the green button once the phone will open your recent call list. You can dial contacts by scrolling up or down to select that contact to redial their phone number.

Missed calls: Missed calls will show a Phone icon on the front screen.

Simply click the green call button to open your call history and select options on that missed call to see the details.

How to text message and view messages

Here you can select to write a message, see your message inbox, draft messages, outbox messages, sent messages, message templates and message settings. Select any of these functions by scrolling up or down to each function and click the “OK” key to select that function

1. Click the Menu Key to open the menu (Or use the up arrow to open messages)
2. Click the “OK” key to open messages
3. Select write a message by clicking the “OK” key on write messages
4. Type your message using the key pad. (See below for more info)
5. Click the select key on “send to” to select who you want to send it to,
6. Then click select on “Enter recipient” (manually put in phone number) or add who to send it to via the phone book, scroll down and select “add from Phonebook”
7. Once selected click options then click send

How to use the Key pad for writing a message: To insert the text, you will use the number keys. In the text message mode these keys are used to write the characters, each key contains more than one character. To change characters using the same button press quickly to scroll through the selection until the character that you want appears. To add the next character, wait until the cursor moves.

To change the entry methods, you need to press the [#] Hash button. This will change from capital letters, to numbers to non-capital letters.

Press the [*] Star button to enter the Select symbol interface, and then use the up, down, left and right keys to select a symbol by clicking the “OK” key to select your symbol.

View Messages:

The screen will show a text message box of any new messages.

To view these messages simply follow the steps above to open the text message menu.

Scroll down to inbox and select inbox with the “OK” key to view new messages.

Scroll up or down to select which message you wish to view. Then click “options” > “View” to read that message. You are also able to reply, forward or call the sender.

How to change profiles, ringtones and message tones

1. Open the menu by hitting the “Menu” Key. Scroll down until you reach “Settings” then click the “OK” key
2. Select Profiles by clicking the “OK” Key
3. Select which user profile you would like. The green tick shows which profile is currently selected.
4. Once this is done you can now customize that user profile
5. Scroll down and select Customize using the “select” key
6. Here you can change Alert type, Ring type, Incoming call tone, Ringtone Volume, Message tone, Message Volume, Keypad tone, Key pad Volume, Power on and off tone, and system alarm on or off.
7. Scroll up or down using the up or down keys, to highlight and select using the “OK” key to change any tone or volume.

Activating Silent Mode: Pressing and holding the star  button will activate silent mode on the phone; to restore normal mode press and hold this button again.

Additional Features and settings

Torch

To turn on the torch, press and hold the Torch button (which is located on the right side of the phone) for 2 seconds; to turn it off press again. The torch can only be turned on when the phone is unlocked by hitting Menu then the [*] Star button.

How to access multimedia settings

1. Click the “Menu” key to open the menu
2. Scroll down until you see “Multimedia
3. Click “OK” key to open Multimedia settings
4. Scroll to select which function you want to select

What you will see in the multimedia menu:

Camera

The camera can take both still photos and videos.

If you want to take a photo open the multimedia menu as per above’s instructions, then click ok on the camera.

Use the “5” key to take the photo.

To create a video, open the multimedia menu as per above’s instructions, then click ok on the video recorder. Use the “5” key to start the video record. You can use the “5” key again to pause the video or use the top right key to stop the video recording.

Gallery

This is the menu option that allows you to see your pictures. To access gallery simply press the Menu key to open the menu and press the down key until you get to Multimedia, click “OK” and you will then see the Gallery menu, scroll down to this and click ok. Scroll through and click on the image you want to expand. You can then view, Send via multimedia message, use as, rename and delete.

Video player

To access Video player simply press the “Menu” key to open the menu and press the down key until you get to Multimedia, click “OK” and you will then see the video player menu, scroll down to this and click “OK”

Press the options key to open your selected video.

You can then play, use as, send via multimedia message, rename and delete.

To play a video use the “5” key, you can then press the [*] key to put the video into full screen.

Audio Player

You can access the Audio Player via the menu clicking the “Menu” key and scrolling down to Multimedia and selecting “OK” and scrolling to Audio Player and clicking the “OK” key.

This feature is used to reproduce audio files. This phone only supports MP3 format. Press the number [5] button to play as well as pause.

Sound Recorder

The phone can reproduce WAV and AMR sound files.

You can access this via menu key, scrolling down to Multimedia and selecting Sound recorder,

Press the option button to open options, click “OK” on New record to start recording. You can pause and stop recording using the top left and top right keys.

To play back a recording, click on options and ok on “lists” and choose which recording to play by pressing ok then select on play. You can also rename and delete these files.

FM Radio

Earphones must be used to enable **FM radio**.

Open the menu and scroll to multimedia then FM radio to play FM radio channels.

If it's the first time accessing the FM radio you must click the Options menu and select 'Auto Search' to tune all available FM stations.

How to access file manager

Click the “Menu” key to open menu, then scroll down to file manager and click “OK” to open this menu.

With this menu you can access audio, music, photo and video files stored on the phone as well as the Micro SD card should one be inserted.

How to access settings

Click on menu and scroll down until you get to settings, then press ok.

What you will see under settings:

Boost settings

You can turn Volume Boost on or off. This feature us designed to increase the volume of the calls, so you can hear clearly. Once on an Ear Icon will appear on the home screen.

Tone Control

You can change the tone of the sound coming from the earpiece:

- Normal frequency: no change (default)
- Low frequency: makes the sound smoother
- High frequency: make the sound sharper

Phone Settings

Here you can change settings on your phone.

What you will see under phone settings:

Time and Date: You can change the time and date on the phone

Schedule power on/off: This is found in the Settings menu under “Phone Settings”. The mobile phone will be automatically powered on or off if you program the specific time in this mode.

Language: You can change the language selecting menu with the “OK” key, scrolling down to settings and clicking “OK”, then scroll down to language to change the language on the phone.

Preferred input method: Select your preferred input method as needed.

Display settings: Set wallpaper, screen saver, power on/off animation, Screen Backlight, show date and time and screen switch effects

Shortcuts: You can change the shortcut buttons to open any menu you prefer.

The shortcut keys are the up and down button. Click ok to change what shortcut menu you prefer.

Security Settings

SIM security: You can create a pin lock on your sim card, change or create a pin.

Phone security: The default password is 1122 and it is required when the phone is locked, until you intentionally change it. With this option you can turn on/off the phone lock setting. You can change the password by scrolling down to the “Change Password” option and entering in the factory default password of 1122 and then enter your password of choice.

Screen Auto lock: You can change the time or completely switch off Screen Auto Lock.

Connectivity

Here you can turn Bluetooth on or off and search for nearby devices to connect.

Restore factory Settings

Before you select this option please remember that all previous settings, files and contacts will be erased. The phone will be restored back to the original factory settings. After this is complete you will not be able to access any data that was previously on the phone. So please back up your files before you proceed.

Click ok on restore factory reset and enter your phones password. Default password if you haven't changed it is “1122”

How to access Organizer

Click to “menu” key to open the menu, then scroll down to Organizer and click “OK” to open this menu.

What you will find under Organizer:

Calendar: To add an event, simply press options and scroll down to “add event”. Scroll down through each option to fill in the calendar event.

To see what events, you have on other days, simply scroll up, down, left or right to that day and click “options” to see the events on that specific day. You can also add an event by scrolling to the day of the event you wish to make clicking ok then add and follow the same process as above.

Calculator: Use the number buttons to enter your numbers, the up, down, left, right and ok button will do your calculations as shown on the screen

Task mode: To add a task simply click add, add the Date, time and subject, alarm, Repeat, Priority and details just by scrolling down and clicking ok on each icon.

Alarm: To create an alarm simply click edit and fill in each option to create your alarm.

Troubleshooting and Support

If you are experiencing difficulties with your mobile phone, please go through the following troubleshoots prior to contacting Opel Mobile support.

The Mobile Phone will not power on:

1. Ensure the battery is inserted correctly
2. Ensure you are pressing and holding the power button for 5 seconds. (Red end call key)
3. Ensure you have charged the phone for at least 10 minutes

The phone is asking for a password on start-up:

1. The default password is 1122, you can change the password via steps outlined above in security settings

The phone is asking for a PUK code:

1. This means you have input the incorrect password 3 times or more. Contact your Telco provider to retrieve your PUK code to unlock your phone.

SIM card error or no SIM card:

1. Ensure you have inserted the SIM card correctly and are using the correct size SIM card. Follow instructions above for installing the SIM Card.
2. Your SIM card may be damaged or dirty, ensure you replace your SIM with your Telco provider if this error occurs.

Failure to connect to the network:

1. Your network signal may be weak or out of range. Contact your Telco provider or try the phone in a different location to check your signal.
2. Your SIM card may be damaged, invalid or has no credit. Contact your telco provider for support.

Failure to make an outgoing call:

1. Ensure you have entered the correct phone number you wish to dial.
2. Ensure you have enough credit on your telco account. Contact your provider for support.
3. Your signal strength may be weak. Check your signal strength and contact your telco provider.

Cannot hear anyone on the call:

1. Ensure your call volume is adjusted to your requirements. Using the volume keys on the left side of the phone.
2. Ensure you have sufficient signal strength

Cannot receive calls:

1. Ensure your mobile phone is switched on.
2. You have enough signal strength to receive calls.
3. Ensure you have not enabled call barring. You can find this under >call center > call settings > call barring.
4. Ensure your SIM card is installed correctly.

The other party cannot hear you on the call:

1. Ensure your hand or fingers are not covering the Microphone. Located at the bottom right of the phone.
2. Ensure you are speaking directly into the microphone.
3. Ensure the other party has their volume turn up to their desired level.

Mobile Phone wont charge:

1. Ensure the power plug is inserted in the wall socket correctly and the wall switch is turned on.
2. Ensure the wall power socket is working by testing another device or a separate power socket.
3. Ensure you have inserted the mini USB cord into the phone correctly or into the charging cradle correctly and that the phone is inserted into the charging stand correctly.
4. Ensure there is no dirt or dust accumulated in the phones power socket.
5. Ensure you have left the phone on charge for at least 10 minutes as the battery may have run out of charge completely.

Mobile phone won't connect via Bluetooth:

1. Ensure you have turned on and activated the Bluetooth setting. See above for instructions.
2. Ensure the other device has Bluetooth enabled.
3. Your Bluetooth device may be too far away from the other device to connect. Ensure you are within range of this device to connect.
4. Ensure you follow the Bluetooth instructions above.